

## Operation, Maintenance and Installation Manual



CAUTION: Disconnect power before servicing. Read instructions thoroughly. Check local, state and federal codes and install to meet requirements.

### Electrical Specifications

Switch: Rated for 120 VAC, 10 Watt Maximum  
or 12V AC/DC, 50 Watt Maximum  
Wire: 18 Gauge 2 Conductor SJOOW

### Model Numbers

7739: 15' Normally Open Switch  
7740: 20' Normally Open Switch  
For other cord lengths and/or configurations, please consult the factory for custom specifications.

### Description of Operation

When water rises the float switch sends a signal to and activates a remote alarm or an alarm indicator light.

### Maintenance

Check and clear float of debris as needed.

### Installation and Removal of Filter Switch

- Determine if the filter switch needs to use the included adapter.
  - If filter has an opening for the filter switch that has a hole with an internal vertical wall, snap the adapter in the hole first as shown and then snap the filter switch into the adapter (see Fig. 1A).
  - If filter has a 1" through hole **WITHOUT** an internal wall, then insert the filter switch until it snaps into place (see Fig. 1B).
- To remove filter switch from the filter, press both release tabs and pull the switch out of the filter switch mounting hole.

