

Mini Doser™ Pump Control Installation Instructions

**Warning: Turn off all power when installing or adjusting unit.
Failure to turn off all power could result in serious injury or death!**

Read instructions thoroughly.

Check local codes and install to meet requirements.


Note: Check to make sure the right float switch is being used for the right application.

Normally Open - float switches are open while hanging "down" and will close on a rising liquid level. Typically used for "empty tank" applications.

1. Determine desired cord tether length . See Figure 2.
2. Attach the Pipe Clamp at the desired location. See Figure 1. Adjust the tether length to achieve the desired pumping range. Use Figure 2 as a guide and test system by filling tank and cycling the system to achieve actual desired pumping range.
3. Tighten the clamp as tight as possible.
4. Electrical outlet must not be located in pump chamber. Electrical outlet voltage, piggyback plug voltage, and pump voltage must match. Insert switch's piggyback plug into outlet. Plug pump into piggyback plug and check the system by allowing the system to cycle to insure proper operation.

Caution! Use Only
As A Guide, Actual
Testing Must Be
Performed To Obtain
Actual Pumping Range.

Figure 1

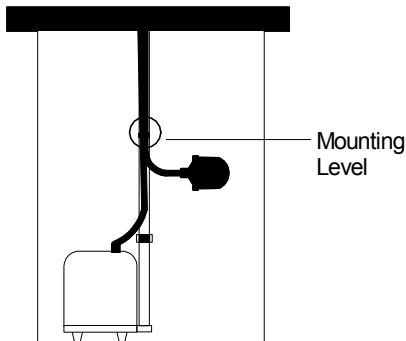

Typical application shown
is for a pumping system

Figure 2

Tether Length	Pumping Range
3"	3.25"
4"	3.75"
5"	4.00"
6"	4.50"
7"	5.00"
8"	5.25"
9"	6.00"
10"	6.25"
11"	7.25"
12"	7.50"
13"	8.75"
14"	9.00"

Caution! Minimum
Tether Length is 3.0"

For Pumping Ranges
Greater than 9" use
Alderon's Big Switch™
Pump Control.



Specifications

Electrical: 15 amp @ 120 VAC/240 VAC
Cord: SJOW-A flexible 14 gauge, 2 conductor Neoprene
Float Housing: High Impact PVC, 3.25" diameter x 4.55" length
Max Temperature: 140 degrees F.
Switch Configuration: Single Pole, Single Throw



Leading Edge Control Products

Alderon Industries, LLC
 P.O. Box 145
 Hawley, MN 56549

P/N 10384 Rev. A
 2/3/03
 Phone: 218.483.3034
 Fax: 218.483.3036

